


**Assembling Meeting Schedule with Acrylic Panel on Standoffs
(Rear Assembly)**

(Assembly Only)



Standoff Rear Assembly

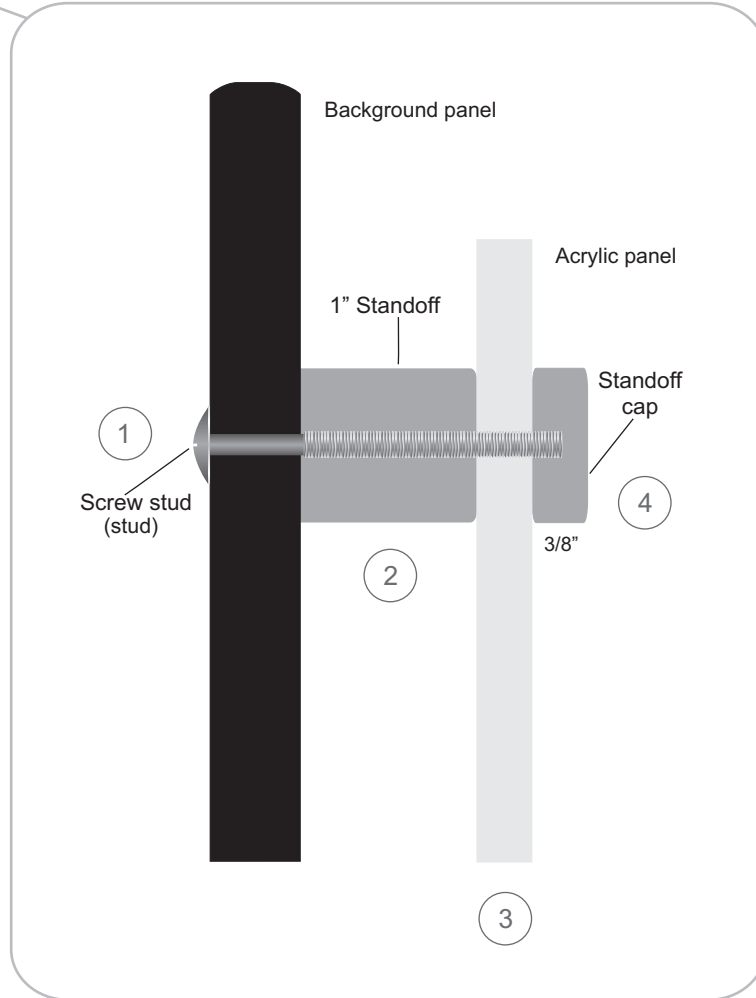

1. Insert Screw stud through rear of background panel
2. Securing the stud in place with a screw driver, screw 1" Standoff on front of stud
3. Place Acrylic panel on 1" standoff and stud
4. Securing the stud in place with a screw driver, screw Standoff cap on remainder of stud
(level panel before tightening completely)

KHSignage.com © 2013 Bella Teres LLC. These presented sketches, drawings and instructions are the property of Bella Teres LLC. They are intended for use by our clients in the installation of this Corporation's products. Any modification or reproduction without the written consent of our Corporate President is strictly forbidden.



KHSignage.com

(770) 881 7689 Phone
(770) 881 8249 Fax
info@KHSignage.com
www.KHSignage.com

Correspondence to:
1415 Highway 85 North
Suite 310 129
Fayetteville, GA 30214

These instructions may be downloaded from the KHSignage.com website:

www.KHSignage.com/installations.html